


**RCT380 Rear Sensor Relay with Audible Warning Device**  
**Fitting Instructions**

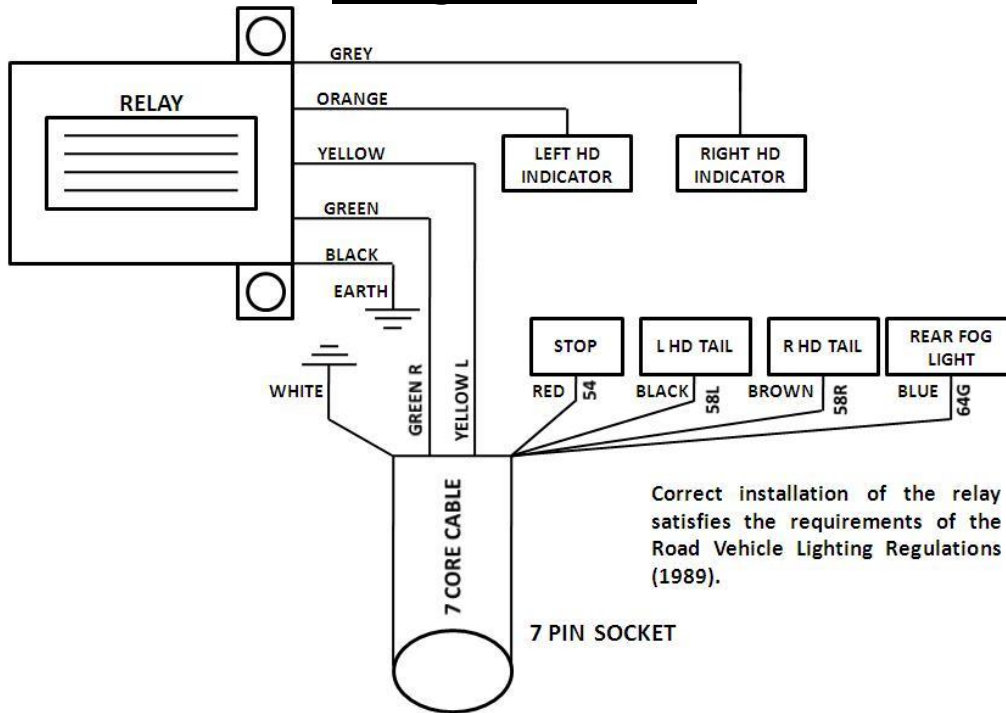

The rear fitting sensor is designed to work in conjunction with a combined hazard warning and indicator flashing unit. Before commencing the fitting ensure the vehicle is parked safely off the road with handbrake on and remove the relevant fuse on the vehicle.

1. Fix the relay in the boot of the vehicle adjacent or near to the 7 core cable and the vehicle harness.
2. Ensure it will not be damaged by luggage etc.
3. Connect the wires in accordance with the diagram above.
4. Reconnect the relevant fuse on the vehicle.

The relay will only function when a trailer or caravan is connected.

When a trailer or caravan is connected, the buzzer will sound in unison with the flasher. If a bulb or connection failure occurs, the buzzer will cease to function.

Suitable for 12V negative earth vehicles.

Ring Reference: - L335/10

Distributed by:

**Ring Automotive limited** Gelderd Road, Leeds, England LS12 6NA

Tel: +44 (0)113 213 2000 Fax: +44 (0)113 231 0266

Email: [autosales@ringautomotive.co.uk](mailto:autosales@ringautomotive.co.uk) Web: [www.ringautomotive.co.uk](http://www.ringautomotive.co.uk)